



结露

- 若将卡口适配器从寒冷的地方直接拿到温暖的地方，卡口适配器可能会结露。为了避免这种情况，请先将卡口适配器放在塑料袋或类似物品中，然后将其带到温暖的地方。当袋中空气温度到达环境温度时，取出卡口适配器。

 
清洁卡口适配器

- 请勿使用任何有机溶剂（如稀释剂或汽油）来清洁卡口适配器。

安装和拆卸卡口适配器


A-安装卡口适配器

- 取下相机上安装的镜头、后镜头盖和卡口适配器的前后盖。若要取下卡口适配器盖，请将其沿逆时针方向转动。
- 将卡口适配器上的相机安装标记对准相机上的白色标记。将卡口适配器插入相机的卡座中，并将其顺时针转动，直至锁紧到位。

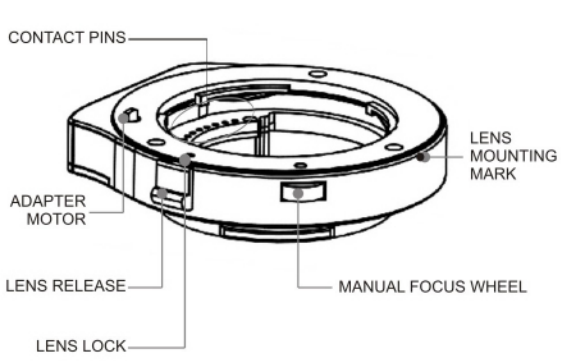

Lenses' adapter TA-GE1 Series is applying on the SONY "E" mount lenses interchangeable lenses digital cameras (show as: "Camera" on below) 's lenses adapter. When applying the "E" mount system with "Contax-G" Series lenses (Shows as: lenses on below), Please apply on this adapter.

 Appendix:



BLE4.0 Bluetooth Adapter
to visit wireless firmware upgrade,
please click to "www.techart-logic.com"

 
*Please do not press the camera's lens release button when installing the adapter, it may not fit with the lenses adapter when install.
*Please DO NOT to incline the adapter set on the camera.
3. When install the lenses on the adapter, please ensure the lenses install marking fit with the Red marking on the adapter. Once the lenses input and fit on the adapter set, press and rotate in clock-wise, until its lock on.
* Don't press the lens release button on the adapter when doing the lenses installation, it may not fit with the lens adapter when install.
*Please DO NOT to incline the lenses on the adapter set.

B - Remove the adapter

- Hold the lens release on the adapter, and roll the lenses in anti-clock wise, unless it lock and stop. Remove the lenses from the adapter's set very carefully and stable.
- Hold the lens release on the camera's body, and roll the adapter in anti-clock wise, unless it lock and stop. Remove the adapter from the camera's set very carefully and stable.

Attention when taking photos

- Please DO NOT install any extra parts or accessories(Such as Teleconverter) .
- Depends on different lenses, the actual distance may have differences with the camera lenses' distance marking references.
- Using adapter for photography, the minimum of focal length rate many enlarge.

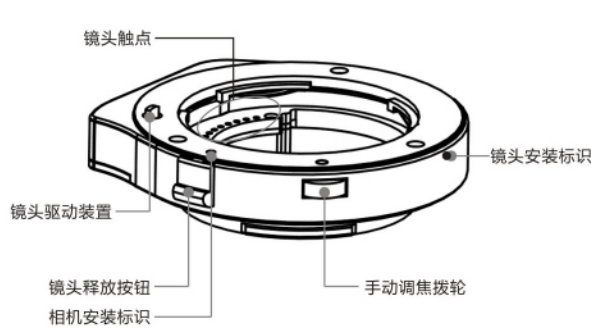

卡口适配器TA-GE1系列是一种用于配备有E卡口系统的SONY可更换镜头数码相机（以下简称“相机”）的适配器。在E卡口系统上安装Contax-G系列镜头（以下简称“镜头”）时，请使用此卡口适配器。

配件：



BLE4.0蓝牙适配器
固件无线升级操作方式请访问www.techart-logic.com

 
*安装卡口适配器时切勿按压相机上的镜头释放钮，否则卡口适配器将会结合不当。
*切勿倾斜插入卡口适配器。
3-将镜筒上的安装标记对准卡口适配器上的红色镜头安装标记。将镜头插入卡口适配器的卡座中压紧，并将其顺时针转动，直至锁紧到位。
*安装镜头时切勿按压按压卡口适配器上的镜头释放钮，否则镜头将会结合不当。
*切勿倾斜插入镜头。

B-拆卸卡口适配器

- 按住卡口适配器上的镜头释放钮，并逆时针转动镜头，直至转动停止。小心地将镜头从卡口适配器的卡座中拔出。
- 按住相机身上的镜头释放按钮，并逆时针转动卡口适配器，直至转动停止。小心地将卡口适配器从相机卡座中拔出。

拍摄注意事项


- 请勿在卡口适配器的前后端安装任何物品（如增距镜等）。
- 取决于镜头，实际距离可能与镜头的距离标度略有不同。
- 利用卡口适配器进行拍摄，最小焦距值可能会变大。

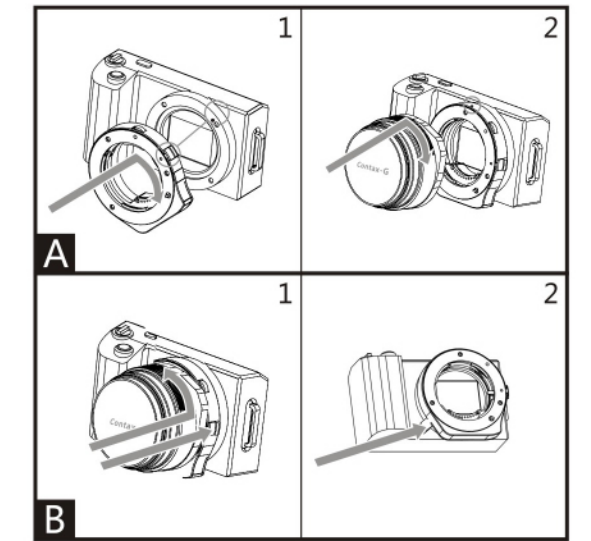

Functional Setting

CAMERA Aperture is not for metering. This is for some special function. Always set the CAMERA aperture to the maximum F/ stop to get the correct exposure.
Operation methods: Use the camera's aperture to adjust to the setting mode's corresponding aperture rate, and then take a photo to be confirming the setting.

F/ stop	Function
F25	All Time MF / AF Change
F45	Standard / Default Focus
F29-F81	Adjust the Focus
F90	Enter the firmware upgrade state (After power off)

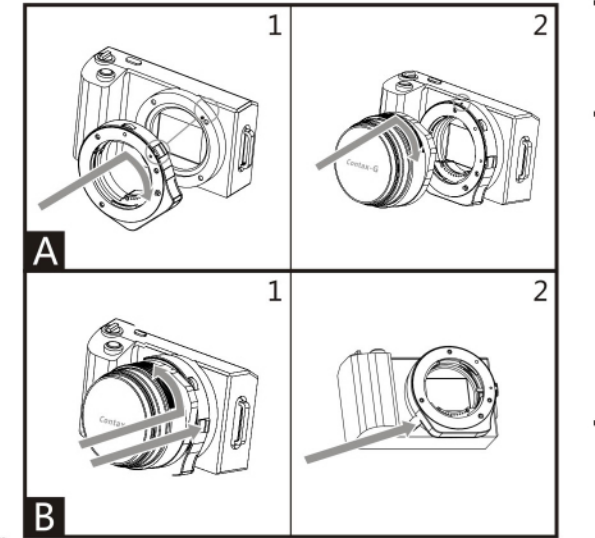 

功能设置

操作方式：将机身光圈调整到设置内容所对应的光圈值，然后按快门拍一张相片进行确定。

光圈值	设置内容
F25	自动、纯手动切换
F45	出厂默认焦点
F29-F81	调整焦点
F90	进入固件升级状态（关闭电源后）

快门AEL选项

在相机屏幕菜单内查看【设置-快门AEL选项】
当快门AEL开时，镜头光圈必须和机身光圈同步才能正确曝光；当快门AEL关时，机身光圈应该设为最大光圈；如相机内没有快门AEL选项等同快门AEL选项开。
***请使用最大光圈进行对焦，对焦结束按需要设置光圈，否则将产生曝光不正确**

Warning

- To prevent any dangerous of fire or electric shock, please DO NOT apply this product under rain and under humid.

Notes

- When installing the adapter, please prevent any mechanic impact with parts.
- Please prevent to change your lenses under dusty or dirty conditions.
- When the user carry the camera consist with lenses and adapter, please hold the camera and lenses at the same time.
- Don't touch with the contact pins on the lenses and the adapter. If conductivity parts are dirty or under un-clean condition, may affect the signal transmission between the lenses and the camera, to occur operation error.
- Please Don't touch the adapter's internal parts. If discover it was dirty or dusty, please apply with the air blow device or soft-brush to clear it nicely, do not attrition.

Storage the adapter

- Always place the lens cap on the mount adapter

警告

- 为减少发生火灾或触电的危险，请勿让本装置淋雨或受潮。

 
使用须知

- 安装卡口适配器时，小心不要使其收到机械性冲击。
- 避免在多尘或过脏的地方更换镜头。
- 当在装有镜头的情况下携带相机时，请同时握住相机和镜头。
- 请勿触摸镜头触点。若镜头触点沾有污垢等，可能会干扰在镜头和相机之间传送和接收信号，从而造成操作故障。
- 请勿触摸卡口适配器的内部。如发现卡口适配器的内部有污垢，请用吹气刷或软刷将其轻轻拂去，切勿摩擦。

存放卡口适配器

- 务必始终将镜头盖装在卡口适配器上。
- 请勿将卡口适配器长期存放在非常潮湿的地方，以免发霉。

对焦状态

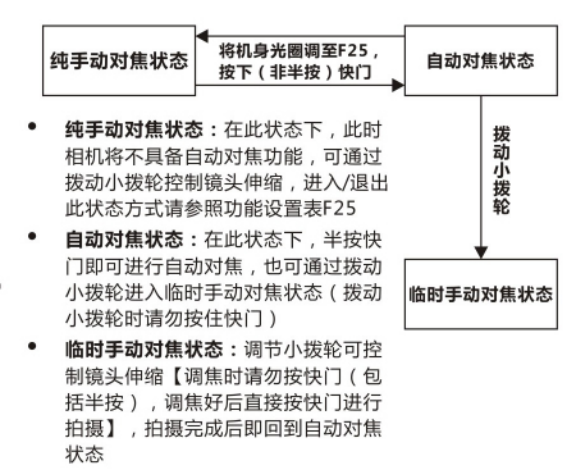

- 纯手动对焦状态：**在此状态下，此时相机将不具备自动对焦功能，可通过拨动小拨轮控制镜头伸缩，进入/退出此状态方式请参照功能设置表F25
- 自动对焦状态：**在此状态下，半按快门即可进行自动对焦，也可通过拨动小拨轮进入临时手动对焦状态（拨动小拨轮时请勿按住快门）
- 临时手动对焦状态：**调节小拨轮可控制镜头伸缩【调焦时请勿按快门（包括半按），调焦好后直接按快门进行拍摄】，拍摄完成后即回到自动对焦状态

- To prevent mold, do not keep the mount adapter in a very humid place for a long time

Condensation

- If "TECHART" carry out from the cooler environment and apply on the warm condition. Condensation may happen on "TECHAR" adapter. To prevent this situation occur, please bring it inside a plastic bag or similar material, then keep it under warmer condition. When the in-bag's temperature is close to environment temperature, user can bring out the "TECHAR" adapter.

Clear-up "Techart" adapter

- Please don't use any an organic solvent (such as thinner or gasoline) to clear up the adapter.

Install and Remove the adapter

A - Install the adapter:

- Remove the camera lenses, lenses's cover and adapter's front and back protection cover. If you need to remove the adapter's protection cover, please roll it in anti-clock wise.
- When install the adapter on the camera, please ensure the installation marking can achieve to the "White" marking on the camera, then put it inside the lenses place, roll it in clock wise direction until its lock and set in right position.

Focus Stage

